

ICOM

INSTRUCTION MANUAL

WIDEBAND RECEIVER
IC-R7100



Icom Inc.

TABLE OF CONTENTS

IMPORTANT	i	5 SCANS	19 ~ 28
PRECAUTIONS	i	■ Basic scan	19
EXPLICIT DEFINITIONS	i	■ Advanced scan	20
INTRODUCTION	i	■ Skip function	21
UNPACKING	i	■ Voice scan control function	21
TABLE OF CONTENTS	ii	■ Scan resume condition	22
1 CONTROL FUNCTIONS	1 ~ 6	■ Scan SET mode	22
■ Front panel	1	■ Basic scan operation	23
■ Function display	5	■ Advanced scan operation	25
■ Rear panel.....	6	■ Dual scan operation	28
2 CONNECTIONS	7 ~ 10	6 CLOCK AND TIMER	29 ~ 32
■ Unpacking	7	■ Clock and timer mode	29
■ Mounting the receiver	7	■ Clock adjustment	30
■ Antenna	7	■ Timer programming	31
■ Grounding	7	■ Timer operation	32
■ Power supply connections	7	7 MAINTENANCE AND ADJUSTMENT	33 ~ 36
■ Connections chart	8	■ Disassembling the receiver	33
■ Tape recorder connections	9	■ Fuse replacement	34
■ Remote jack (CI-V) information	10	■ Resetting the CPU	34
3 BASIC OPERATIONS	11 ~ 14	■ AC power supply modifications	34
■ Initial settings	11	■ Backup batteries	35
■ Tuning step setting	11	■ Beep tone ON/OFF	35
■ Frequency setting	12	■ Main dial brake adjustment	35
■ Receiving	13	■ Cleaning	35
4 MEMORY CHANNELS	15 ~ 18	■ Troubleshooting	36
■ Memory channel description	15	8 OPTIONS INSTALLATION	37
■ Memory channel selection	16	■ UT-36 VOICE SYNTHESIZER UNIT	37
■ Memory writing	17	■ MB-23 CARRYING HANDLE	37
■ Contents clearing	18	9 INSIDE VIEWS	38
■ Searching for memory channels programmed with the same frequency	18	■ Under the top cover	38
■ Window	18	■ Under the REG unit	38
		■ Under the bottom cover	38
		10 SPECIFICATIONS	39
		11 OPTIONS	40
		SCHEMATIC DIAGRAM	SEPARATE

PRIVACY
Information overheard but not intended
for you cannot lawfully be used.